



INSTRUCTIONS

ROBO STIK

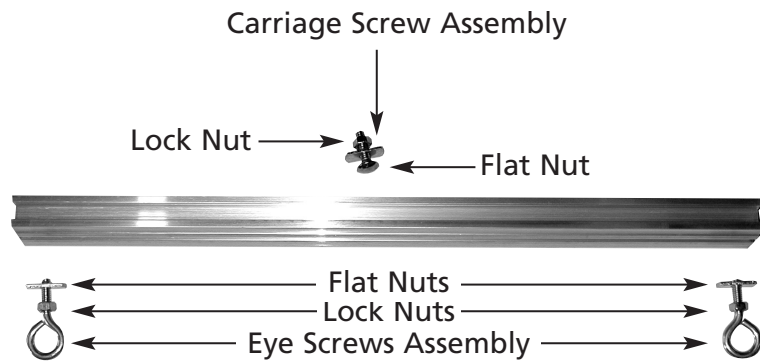


STEP ONE:

Install carriage screw assembly into its channel.  Slide assembly to the approximate center of ROBO STIK. (It takes a gentle touch not brute force.)

STEP TWO:

Rotate the flat nut and lock nut clockwise until they are nearest the ROBO STIK and there are six or seven threads exposed on carriage screw. Next, turning clockwise, install the carriage screw and ROBO STIK into the coupler nut on the bottom of the Light Rail Drive Motor. Turn clockwise until it stops, then back off 1 to 1/2 turns to obtain the desired position. To maintain this position tighten the lock nut against the coupler nut. Leave the flat nut loose until later.

STEP THREE:

Using the provided eye screw assemblies you can mount your lamp to the ROBO STIK's bottom channel.  Be sure the eye screws are threaded into the flat nut by a few threads. Once you slide the assembly to its desired location and position, tighten the eye screw assembly's lock nuts.

IF YOU ARE HANGING YOUR LAMP PERPENDICULAR TO THE DIRECTION OF TRAVEL, IT WILL NEED TO BE BALANCED.

A PERFECT BALANCE CAN BE ACHIEVED

BY SLIDING THE ROBO STIK ON

THE CARRIAGE SCREW MOUNTED TO THE BOTTOM OF THE LIGHT RAIL DRIVE MOTOR.

(PLEASE SEE DETAIL AT RIGHT.) FAILURE

TO BALANCE YOUR LAMP WILL RESULT

IN EXCESSIVE WEAR


AND PERHAPS DAMAGE TO YOUR

LIGHT RAIL DRIVE MOTOR'S DRIVE


WHEEL AND TROLLEY WHEELS.



CORRECT

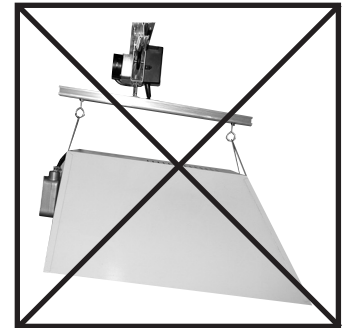

INCORRECT

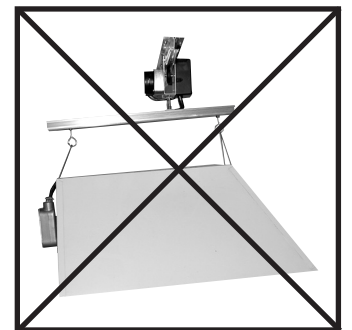

INCORRECT